

BassHeads 122 ANC



boAt


BassHeads 122 ANC

Get ready to immerse yourself in music with your very own pair of boAt BassHeads 122 ANC. You can refer to this manual if you encounter any difficulties in your journey to unparalleled musical bliss.



HOW TO USE:

- 1) Use the correct earmuff & ear fin size for snug fit & better sound quality.
- 2) Note the difference between right(R) and left (L) earphones and insert the earphone into each ear.
- 3) Connect your boAt BassHeads 122 ANC with your mobile device via the earphone jack. Insert the Type-C Jack into your device's USB Type-C port correctly.
- 4) Adjust the volume control to a comfortable level.

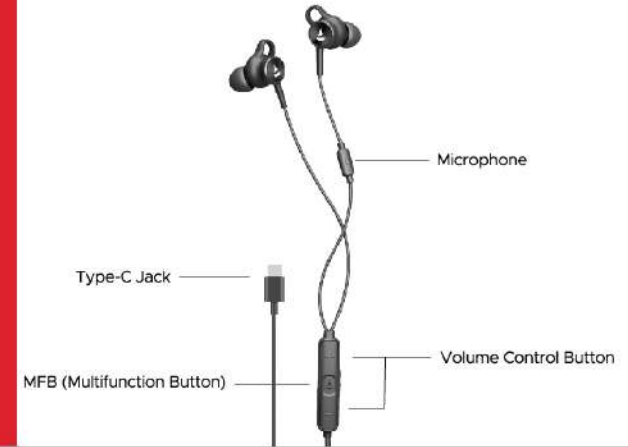

BASIC FUNCTIONALITIES:

- ANC ON: Push the slider button to 'ANC' end
- Ambient Mode: Push the slider button to the middle
- ANC OFF: Push the slider button towards the LED
- Answer Calls: Short press the MFB (Multi-Function Button) 1 time
- Reject Calls: Short Press or Press and hold the MFB to reject a call
- Hang Up Calls: Short press the MFB 1 time to end the call
- Play/Pause Music: Short press the MFB 1 time
- Next Track: Press the MFB 2 times
- Previous Track: Press the MFB 3 times
- Voice Assistant: Press and hold the MFB to activate voice assistant
- Volume Up: Press the Volume + button to increase volume level
- Volume Down: Press the Volume - button to decrease volume level

Note – Some functions may vary based on the connected device & can be configured from the device. Third-party music apps/calling apps may not support few functions.

SPECIFICATIONS:

Type of Product	In-Ear Wired Earphones
Noise Isolation Technology	Active
Active Noise Cancellation	25 dB
Ambient Mode	Yes
Trumpet Type	Single Moving Coil
Frequency Response	20 Hz-20 kHz
Cable Length	110 cm
Plug Pin	Type-C
Driver Size	13 mm
Microphone	Yes

SAFETY CAUTION:

- Avoid prolonged earphone use at high volume levels. Avoid dust, moisture, and stains.
- Please handle with care. Don't expose the product to high temperatures and sharp objects to prevent damage.

DEVICE COMPATIBILITY AND TROUBLESHOOTING:

Some mobile devices don't need any settings to be applied to enjoy music through Type-C wired earphones. If you encounter issues like music playing from phone even when earphones are connected, follow one of the options below-

Option 1: Enable Developer Options → Disable the option of 'Disable USB Audio routing' → Insert the wired earphone & Enjoy music

Option 2: Enable Developer Options → Enable OTG connection & Insert the wired earphone → Enjoy music

Note – When Option 2 is enabled, if the earphones are not used for more than 10 minutes, OTG (On-The-Go) connection gets disabled automatically. This option needs to be enabled again manually.